




# Lenovo Chromebox Micro Wall Mount

CP-CMWALL

## INSTRUCTION - MANUAL


### CONTENTS:

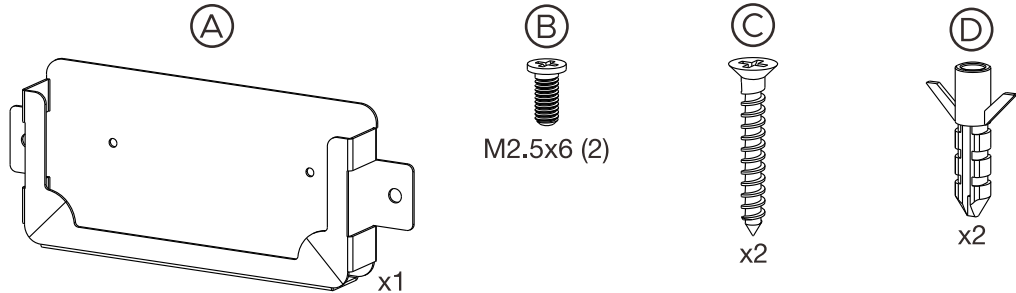


### INSTALLATION:

#### 1. Setting Up Device and Wall Mount

*\*\*Lenovo Chromebox  
for illustration only, and  
NOT INCLUDED*

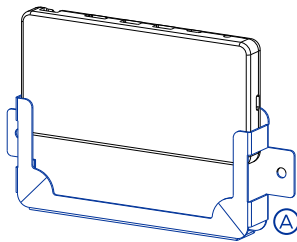


1A. Insert the Lenovo Chromebox device (not included) into the slot as illustrated above

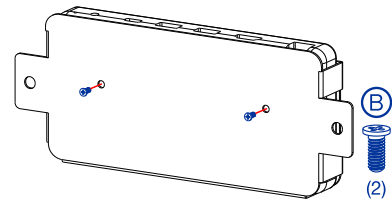


1B. Make sure the mounting holes are aligned with device. Rotate in two screws (B) with screwdriver tool (not included) until securely fastened.

#### 2. Mounting without Anchors Option

*\*\*Lenovo Chromebox  
for illustration only, and  
NOT INCLUDED*

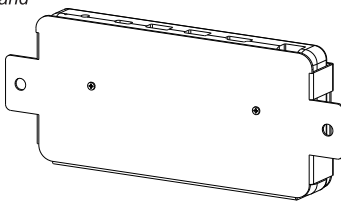


2A. Place the now attached device and wall mount at the desired mounting location on the wall. Make sure it's level to your preference. Rotate in both screws (C) through the holes into the wall using a powerdrill (not included) or screwdriver (not included) until securely tightened.

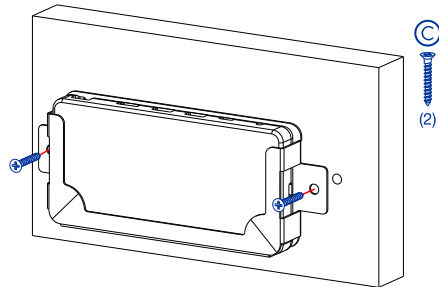

#### 3. Mounting with Anchors Option

3A. When mounting with anchors, first hold the now attached device and wall mount at desired mounting location at wall. Using a pencil, mark off the locations through the holes.

3B. Next remove your wall mount, and drill at the two locations using a power drill (not included). Make sure the drill bit (not included) length and diameter matches that of the anchor and screw. After hole is drilled at both locations, insert the anchors (D). Place the wall mount back, rotate in screws (C) using screwdriver tool (not included) until securely fastened.

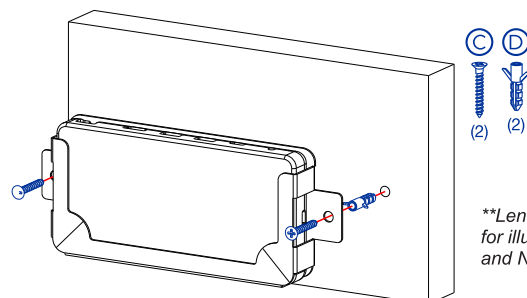

*\*\*Lenovo Chromebox  
for illustration only,  
and NOT INCLUDED*