Hyperflex Security Kiosk Stand for Tablets
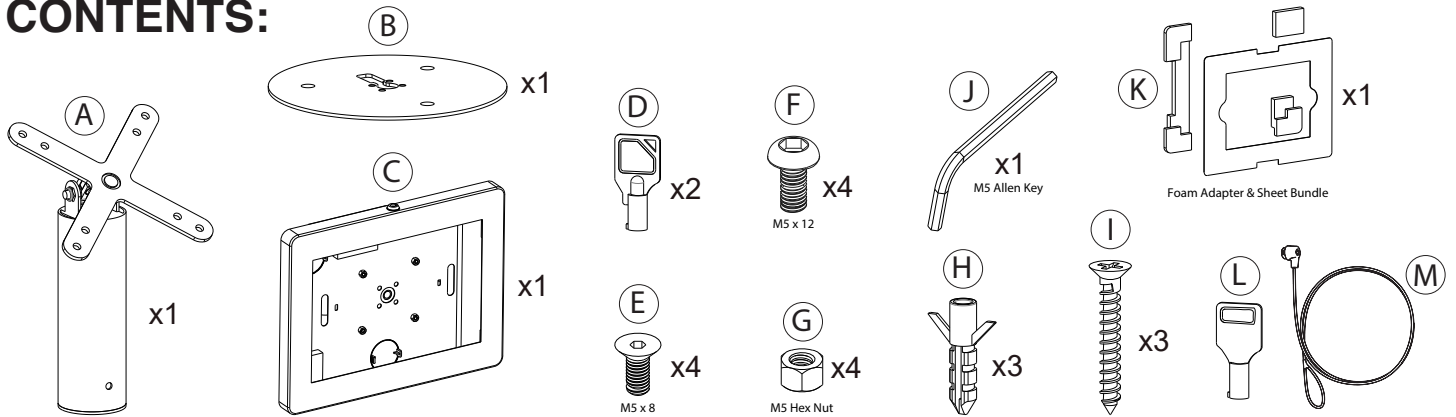
PAD-HSKSB / PAD-HSKSW
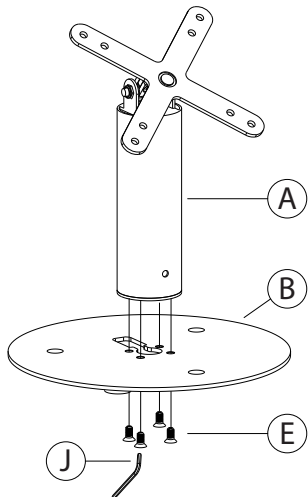
INSTALLATION - MANUAL

CONTENTS:

A ×1
B ×1
C ×1
D ×2
E ×4 — M5 x 8
F ×4 — M5 x 12
G ×4 — M5 Hex Nut
H ×3
I ×3
J ×1 — M5 Allen Key
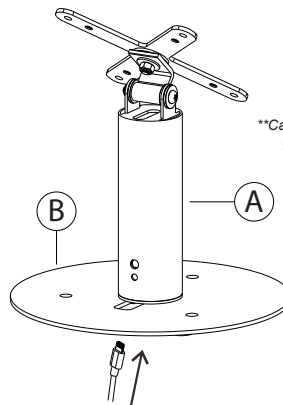K ×1 — Foam Adapter & Sheet Bundle
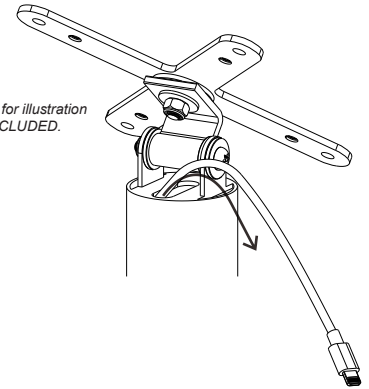L
M

INSTALLATION:

1. Assembling Base

1A. Align holes at the base (B) with the holes on the base of the body (A). Screw in bolts (E) with the provided allen key tool (J) as shown.

2. Cable Managing

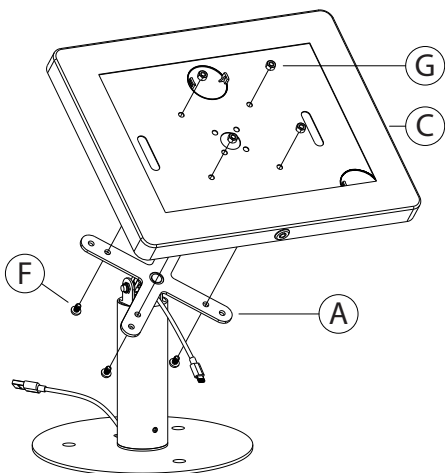***Cables shown for illustration and NOT INCLUDED.*

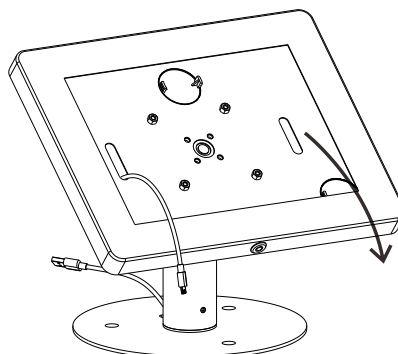2A. Identify the hole at the bottom of the base (B) through where cable routing should go. Then, fish the cable.

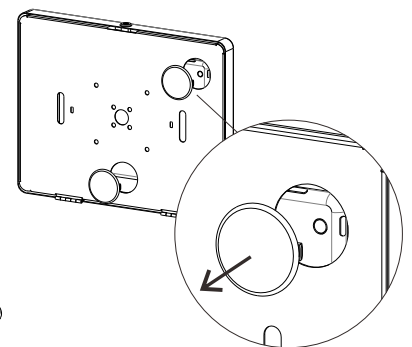2B. Fish the cord through the base and out of the top to properly tuck away cord as shown above.

3. Attaching and Setting up Enclosure

**Cables shown for illustration and NOT INCLUDED.

3A. Screw in the (4) screws (H) from behind through the enclosure and VESA, while holding the hex nuts (I) from the front using the allen key tool (J) until securely tightened.
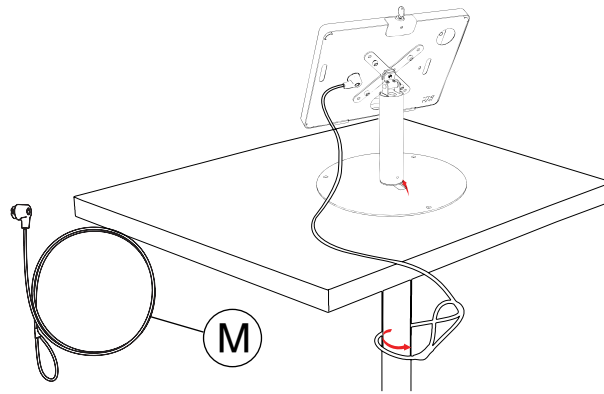
3B. Once the enclosure is attached, fish the cable through its rear holes to charge the device.

3C. Make sure to pop out and off the opening covers in order to use enclosure at full capacity and have access to key ports and openings.
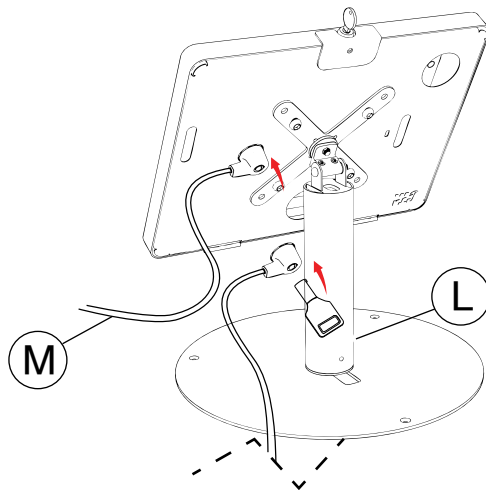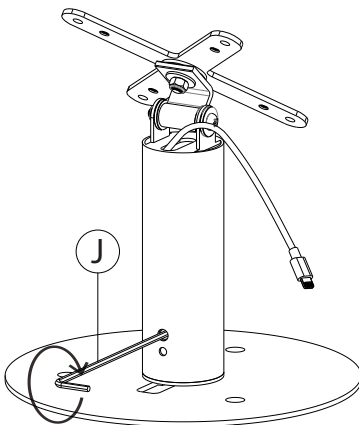
4. How to Anchor Into Table

4A. Take the looped end of lock cable (D) and turn it around leg table then click-in head of lock cable into the security hub.
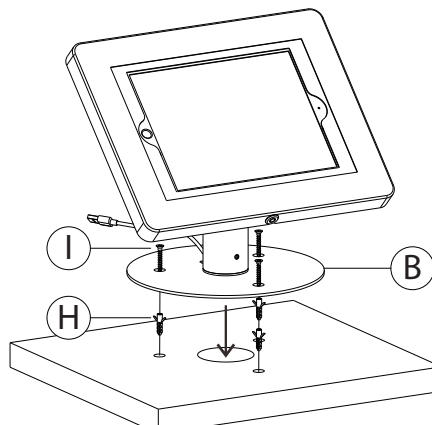
5. How to attach cable lock

5A. Take cable lock and place it in the cut out hole behind the enclosure and then insert the lock key to secure it.

6. Setting Up Device & Enclosure

**Tablet shown for illustration and NOT INCLUDED.

Insert the appropriate foam piece (K) that is compatible with your tablet.

Insert tablet as shown. Plug in power cable to tablet and cable route through the back.

Place the appropriate provided tablet cover (K) to match your tablet.

Close the enclosure and lock it with the included set of keys (D).

Optional
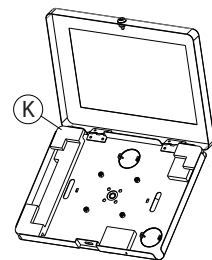### Locking Base Rotation

Turn clockwise to prevent body rotation using the provided allen key tool (J).
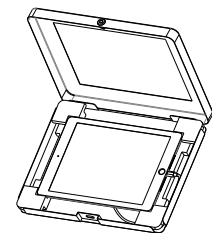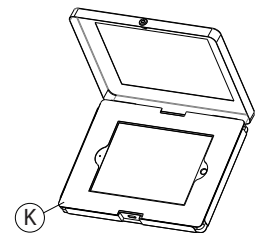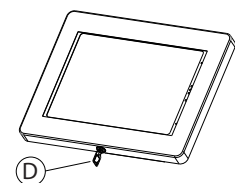
Optional
Mounting into Surface

Insert the anchors (H) and then drill in the nails (I) to the mounting surface as shown above.